


Installation hints and tips



Fill the box with newspaper or use the off cuts or, a combination of both, to stop the box falling with plaster.



Where there are large gaps around the insert, these should be filled with board adhesive, carlite Bonding or similar, prior to skimming

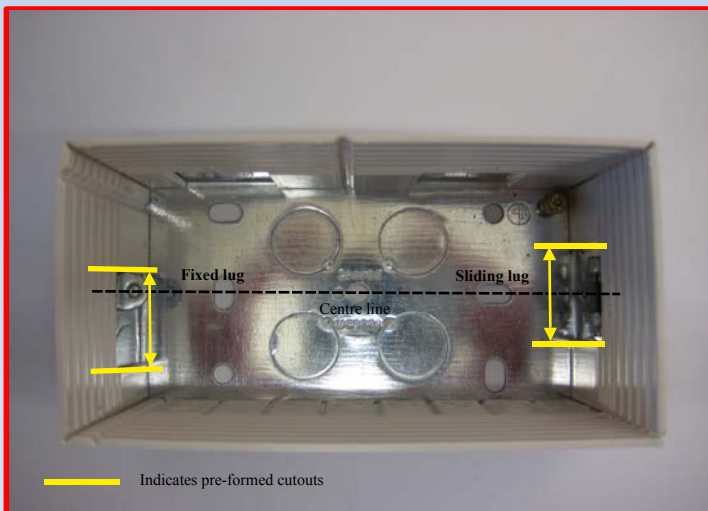


When using the twin profile, ensure that, of the two pre formed “cutouts” that accommodate the fixing lugs in the box, the centralised cutout goes over the larger, sliding lug.

Please watch the video for more detailed guidance on how to use Vexbox

Vexbox is Non load bearing, does not conduct electricity and is manufactured from V0 rated, self extinguishing high impact polystyrene. It is at the discretion of the user whether or not to remove the template prior to second fixing.

Please refer to the data sheet for further technical specification.

Vexbox is designed to fit securely within a single or twin box manufactured in accordance With BS4662, however, as different manufacturers vary slightly in dimensions, it maybe that some boxes are a tighter or looser fit than others.

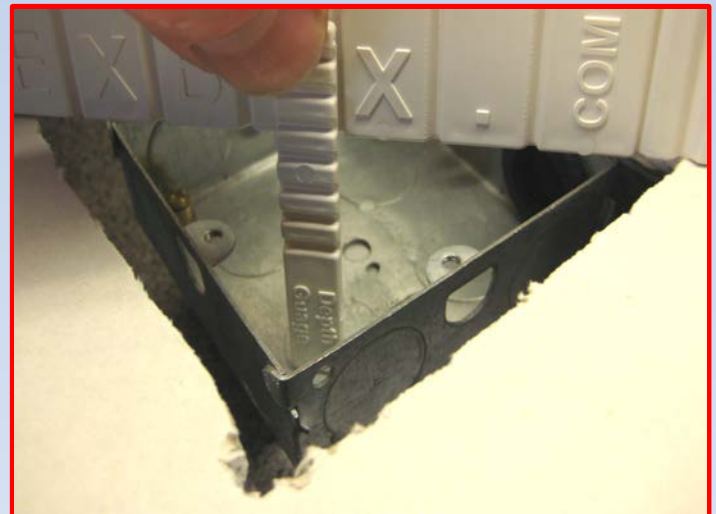

If there is no edge to mark off the depth gauge, use the Vexbox as a straight edge to span the gap.